


# English Simple Manual (簡易英語版)

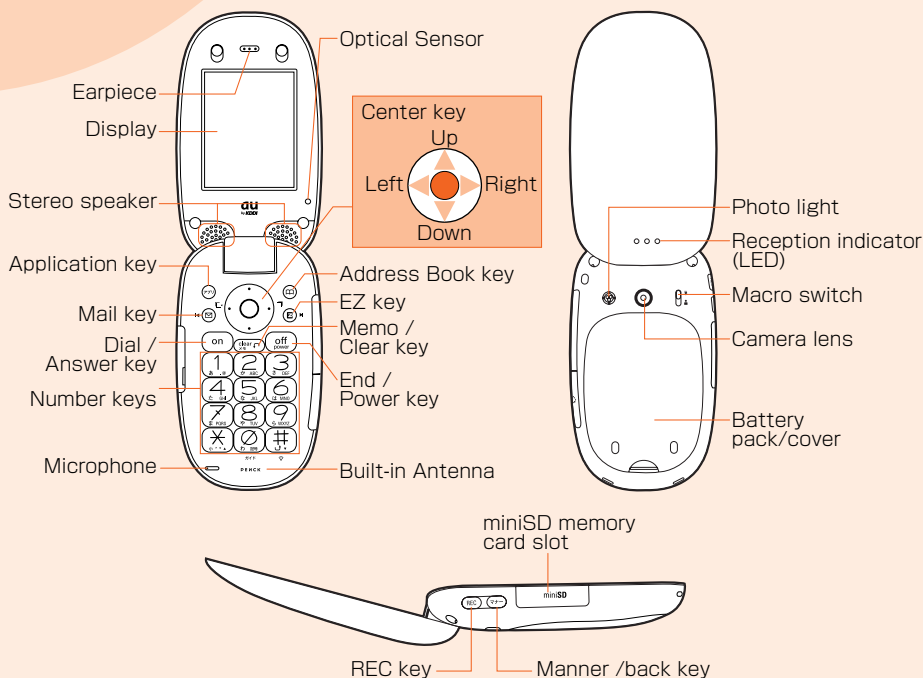

## Turning Power On and Off

### ●Turning power on

Hold down **[off]** for a few seconds.

### ●Turning power off

Hold down **[off]** for at least one second.

## Applying the Phone's Default Settings

From the stand-by screen: Press **[M]** → Press **[3]**.

## Checking Your Own Phone Number and E-mail address

From the stand-by screen: Press **[M]** → Press **[2]**.

## Making and Answering a Call

### ●Making a Call

From the stand-by screen: Enter the phone number you want to call.

→ Press **[on]**.

To end a call: Press **[off]**.

### ●Answering a Call

When the phone starts ringing, press **[on]**.

To adjust the earpiece volume during a call: Use **[V]**.

## ● Storing and Recalling an Address Book Data

### ● Storing Data

From the stand-by screen: Hold down for at least one second.

- Use to select the Address Book record you want to edit. → Press [編集](Edit).
- Enter the data. → Press [登録](Store).

### ● Recalling Data

From the stand-by screen: Press to display the Hiragana Row Search screen.

- Use to select the hiragana row for the record you want.
- Use to select the name of the record.
- Press [表示](Display) to display the Address Book record screen.

## ● Using the Camera (Movie and Snapshot)

### ● Recording a Movie Clip

From the stand-by screen: Press . → Use to select [Movie].

- Press [録画](Record). → Press [終了](End).
- Press [保存](Store) to store the movie.

Pressing [II](Pause) during recording pauses recording.

Pressing [フォト](Photo) in the Movie mode changes to the Photo mode.

### ● Taking a Snapshot

 
From the stand-by screen: Press . → Use to select [Photo].

- Press [シャッター](Shutter).
- Press [保存](Store) to store the photo.

Pressing [ムービー](Movie) in the Photo mode changes to the Movie mode.

## ● Making an International Call

Ex: To call 212-123-△△△△ in the USA



## ● English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.

From the stand-by screen: Press . → Press . → Press . → Press . → Press .

## ● Other Handy Features

### ● Manner Mode

From the stand-by screen: Hold down for at least one second.

Repeat the above operation to disable the Manner mode.

### ● Take A Message Feature (Voice Recording)

From the stand-by screen: Hold down for at least one second.

Repeat the above operation to disable the Take A Message feature.

### ***For inquiries, please contact***

au Customer Service Center (General Information)

● If you are calling from a landline phone: ☎ 0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)